

The following instructions are indicative. There may be technical changes between product batches.

**KUVA 1:**

- Attach the handlebar with four bolts.
- Attach the instrument panel.
- Attach the front turn signals. Secure the turn signals by tightening the nut; do not rotate the signal.
- Attach the mirrors.

**KUVA 2:**

- Remove the front fork axle. Install the rim in the correct position. IMPORTANT: Before removing the axle, inspect the locations of the sleeves and reinstall them in the same order between the front fork and the rim.
- Do not over-tighten the bolt. The front wheel should rotate freely. Over-tightening may damage the wheel bearings.
- Attach the front brake with two bolts.
- Attach the mudguard and brake hose holder.

**KUVA 3:**

- Attach the rear fenders as illustrated in the picture.

**KUVA 4:**

- Disconnect the battery. The battery is attached to the bottom with Velcro.
- Take the battery for charging.
- The battery must be charged to full capacity.

**KUVA 5:**

- Attachment of rear motors (Wheels).
- When viewed from the rear, the motor on the left is labeled L, and the one on the right is labeled R.
- Thread the motor cable and shaft into the rear fork. IMPORTANT: Ensure that the locking wedge shown in the picture fits into its designated slot.
- Tighten the rear wheels with a bolt. Remember to insert the lock washer before the bolt.

**KUVA 6:**

- Attach the brake caliper using two bolts. Use the necessary quantity of black washers shown in the picture to align the brake caliper perfectly with the brake disc.

**KUVA 7:**

- Secure the engine wires by pressing them together.

**KUVA 8:**

- Attach the luggage rack.
- Attach the rear turn signals. Secure the turn signals by tightening the nut; do not twist the turn signal.

## TIGHTEN ALL BOLTS AND NUTS

**CLUSTER**

- Color LCD display.
- Battery charge level.
- Speedometer.
- Trip meter.
- Warning lights.

**RIGHT HANDLE**

- Throttle grip.
- Light switch: off / daytime running lights / headlights.
- Switches 1, 2, 3 not in use. Product limited to a maximum speed of 25 km/h.
- Reverse switch R. IMPORTANT: The device must be stopped before engaging the reverse gear.
- Ignition lock.

**LEFT HANDLE**

- Switch for short / long lights.
- Turn signals.
- Horn.

## **SIDE STAND**

- Lever up. The device remains in the upright position. PARKING POSITION. The rear axle is locked and cannot tilt.
- Lever down. RIDING POSITION. The rear axle is released, and the device can tilt.
- Note that when driving, the lever must be down in the riding position.

## **HAND BRAKE**

- Located on the left brake lever.
- Press the brake lever all the way down to engage and lock the hand brake.
- Release the hand brake before starting to move.

## **REMOTE CONTROL**

- Lock engaged. Pressing the theft alarm button activates it.
- Unlock. Pressing the theft alarm button disarms the system / when using keyless ignition, the device turns off.
- Lightning symbol. Keyless ignition. Pressing twice starts the device.
- Device locator button. Pressing this button prompts the device to report its location.

## **GENERAL**

- The E-go electric scooter is built to be durable but is not indestructible.
- Jumping or aggressive driving can overload and damage the device.
- Do not overload the scooter. Overloading will cause damage to the scooter.
- The recommended weight capacity of the scooter is 150kg.
- Damages resulting from careless driving are the user's responsibility.
- Use the scooter at your own risk and exercise common sense.
- The device does not have an IP rating. Avoid riding in heavy rain.
- The device is comparable to a bicycle. Follow the rules of a bicyclist.
- **Do not ride the scooter without a protective helmet.**

## **BATTERY AND CHARGING**

- 28 Ah / 1680 W lithium-ion battery.
- The charger is suitable for indoor use.

- When charging the battery, first connect the power plug to the wall and then the plug to the battery.
- We recommend charging the battery to full capacity every time.
- The charger fan produces a humming sound during operation, and in the final stages of charging, the charger turns off and restarts. Additionally, the charger's LED light flashes green and red. This is normal, as the charger balances the battery cells. The battery is fully charged when the green light remains on continuously.
- If the battery is depleted, it must be fully charged within 24 hours. Otherwise, the battery may be damaged and fail to charge.

#### **THE BATTERY MUST NOT BE LEFT UNATTENDED DURING CHARGING.**

#### **WINTER USAGE**

- The battery should be charged indoors.
- When the battery is cold, allow it to warm up for 2 hours at room temperature before charging. This also applies to charging immediately after use.

#### **IF THE DEVICE IS NOT USED IN WINTER, IT IS IMPORTANT TO CHARGE THE BATTERY APPROXIMATELY EVERY 2 MONTHS.**

#### **BLUETOOTH**

- The scooter features a compact Bluetooth speaker for listening to music.
- Enable Bluetooth on your mobile phone and pair it with the device. No password is required.

#### **ENGINE**

- Electric motors are located inside the rear wheels.
- The electric motors are brushless hub motors.

#### **BRAKES**

- The scooter is equipped with efficient disc brakes.
- Check the condition of the brake pads every 6 months. Replace the brake pads if they are worn.
- Brake fluid should be replaced approximately every 2 years.

#### **BEDDING IN THE BRAKES**

- Some dragging noise may be heard from the brakes. This is normal.
- Periodically apply strong braking to prevent brake pad glazing.
- If necessary, use brake cleaner to clean the brakes.

## **WARRANTY**

- 12 months or 3000 km, starting from the date of purchase.
- The warranty is non-transferable and valid only for the original purchaser.
- Water damage leaves a mark on the device, and if detected during repairs, the warranty becomes void.
- Tuning the device, as well as bypassing or removing the speed limiter, will result in the warranty being voided.
- The warranty covers material and manufacturing defects. Normal wear and tear, as well as damage or malfunction caused by improper use of the product, are not covered.
- The product is intended for home use; the warranty does not apply to rental or professional use.

**IN CASE OF ISSUES, CONTACT YOUR DEALER.**

## **SPEED REMAINS LOW**

- Check tire pressures. (2 bar)
- Check the battery charge level. If the battery charge is low, the device will not reach its top speed.
- Cold weather conditions.

## **GAS DOES NOT WORK**

- The battery cable is loose.
- Check the microswitches on the brake levers. At the base of the brake lever, there is a small microswitch that should be pressed down and released.
- If a warning light is lit on the dashboard, check the wiring of the throttle handle inside the footboard.

## **SCOOTER DOES NOT ACHIEVE FULL OPERATING RANGE**

- Low tire pressure.
- Cold weather conditions can even halve the operating range.
- Heavy load.
- Road surface and inclines.

## **BRAKE OPERATION**

- The brakes may produce a dragging sound. This is normal.

- Brake forcefully from time to time to prevent brake pad glazing.

(kuvateksti)• If the brake does not hold, pump the brake lever for 3 minutes.

If pumping does not help, tie the brake lever and keep it tied for approximately 10 hours. This will release the stuck brake piston.

We reserve the right to make any measurements and material changes related to the product.

In case of any issues, please contact the store where you purchased the scooter.

Authorized importer:

Huippukone Oy

Tarmontie 2, 15860 Hollola